

# biswal®

## KB 3801



## KM 3801

### Features

- Dimension : 482(L)x214(W)x42(H) mm
- Windows® 95/98/ME/2000/NT/XP compatible
- Provides 18 Internet/Media hot keys (KM Series only)
- PC PS/2 & USB fully compatible
- Designed for enhanced Windows® 95/98/2000 key layout
- High quality membrane tactile key switch available
- Switch reliability : 5 millions
- Provides three ACPI power management keys
- With special driver installation needed (Except Windows® ME/XP)

### Hot Key Spec (KM Series only)

- Ⓢ Sleep — On computers with a power management program, the "Sleep" Hot Key enables you to : Start your screen saver / Log off Windows / Shut down Windows.
- Ⓜ Wake Up — On computers with a power management program, the "Wake up" Hot Key enables you to restore, or wake up your computer.
- Ⓟ Power — On computers with a power management program, the "Power" Hot Key enables you to : Log off Windows / Shut down Windows.
- ⏪ Back — Press this button to go to previous page.
- ⏩ Forward — Press this button to go to next page.
- ⏹ Stop — Press this button to stop current transmission.
- 🔄 Refresh — Press this button to update the current page.
- 🔍 Search — Press this button to bring up " Search Windows " for Web address ; Press this button again to close " Search Windows ".
- 🔖 Favorites — Press this button to bring up " My Favorite Window " . Press this button again to close " My Favorite Window ".
- 🏠 Web/Home — Press this button to go to the default Home Page.
- ✉ Mail — Press this button to activate the e-mail system.
- 🔇 Mute — Press this button to mute sound. Press it again to resume sound.
- 🔊 -Volume — Press this button to decrease volume.
- 🔊 +Volume — Press this button to increase volume.
- ⏮ Previous — Press this button to set media back by one track. During playback of a video file, depress this button to cause the player to rapidly reverse it's playback direction. Press this button once to skip back to the beginning of current track. Press this button twice to skip back to the beginning of previous track.
- ⏹ Stop — Press this button to stop playing the media.
- ⏸ Play/Pause — Press this button to begin playing a CD or a video file (or to restart after pause). During playback press this key to pause the playback, press it again to resume playback on current position.
- ⏭ Next — Press this button to instruct the CD player to queue up beginning of the next track. During playback in a video file. Depress this button to cause the player to fast forward.
- 🎵 Media — Press this button to activate " Windows Media Player ".
- 🧮 Calculator — Press this button to activate "Windows Calculator ".
- 💻 My computer — Press this button to open " My computer ".

### Packing information

	Packing	CUFT.
KB-3801	10 Pcs/Ctn.	2.37'
KM-3801	10 Pcs/Ctn.	2.37'



PS/2 PLUG



USB PLUG

All brand names and trademarks are the property of their respective owners.

